

# Generate Rework order

»

Home (39)

Generate Rework Order x

⌵

📄

Do you want to start the Process?

NCR

▼

☐ Run as Job

⌵

🔍

🔍

OK

Cancel

**Parameters :**

1.NCR is used to select the NCR order document

**Process Use:**

By using this process, we are able to generate the rework manufacturing order